

RIVO MULTITRADE OPTICAL SYSTEMS

Installation of the light control module in Qoros 5



Overview

How to turn on the lights of Qoros 5?

The method to turn on the lights of Qoros 5 is: The light control lever is located at the lower left side of the steering wheel.

Key Takeaways

The light control module in the Qoros 5 is typically integrated with the vehicle's interior fuse box and light control lever, located below the left side of the steering wheel. Locating the Module

The light control module is part of the Qoros 5's electrical system that manages headlights, parking lights, fog lights, and turn signals. Accessing it usually involves the interior fuse box, which is located on the driver's side of the dashboard, either on the side facing the door or just below the steering column. Remove the access panel by pulling the molded handle or releasing hidden clips to expose the fuses and relays.

Preparation and Safety

Before starting the installation:

- Switch off the ignition and remove the key or keyless fob to ensure all control modules are powered down.

- Disconnect the battery to prevent accidental short circuits or damage to the vehicle's electronics.

- Wear anti-static gloves if possible to protect sensitive electronic components.

Installation Steps

- Remove the light control lever: The lever is located at the lower left side of the steering wheel. Carefully detach it by removing any screws or clips securing it to the steering column .

- Access the module: Behind the lever, you will find the wiring harness connected to the light control module. Gently disconnect the harness connectors.

- Replace or install the module: Align the new module with the mounting points and secure it using the original screws or clips. Ensure all connectors are fully seated.

- Reconnect the wiring harness: Attach all connectors to the module, making sure they click into place.

- Test functionality: Before reassembling the panel, reconnect the battery and test all light functions—low beam, high beam, parking lights, fog lights, and turn signals—to confirm proper operation .

- Reassemble the dashboard panel: Once confirmed, replace the fuse box cover and any panels removed during the process.

Additional Tips

- If the module is integrated with other driver assistance systems, check the vehicle's workshop manual for wiring diagrams and module calibration procedures .

- Always verify that the fuses related to lighting circuits are intact before and after installation .

- For models with automatic headlights, ensure the module is compatible with the auto function to avoid malfunctions . Following these steps ensures a safe and effective installation of the light control module in the Qoros 5, restoring full functionality to the vehicle's lighting system.

Article Content

HOW TO: Light/Lamp Control Module Replacement

I had it checked out by BMW and \$150 later, they said I need a new Light Control Module (LCM) and it would cost me

Light Switch Module Replacement

In this article, I will go over the steps involved with replacing the headlight switch and separating it from the lighting

JOYOR Scooter Light Problems? Light Control Module Replacement

Learn how to replace the light control module on JOYOR S-Series electric scooters. This step-by-step guide helps diagnose and fix

Lumishore LUX Light Control Module Installation Manual

The lumishore LUX Light Control Module is a versatile system designed to control various Lumishore LUX lighting products. It allows

Contact Us

Continue your research online:

Website: <https://rivomultitrade.co.za>

Technical inquiry: <https://rivomultitrade.co.za/contact.html>

This document is for preliminary research. Verify specifications against current standards, product documentation and project requirements.

